

# INSTRUCTIONS

## Drying cabinet TS 63 E/TS 93 E

### User instructions



#### Select program

Change program with P-button.



#### Start /cancel program

Push start /stop button. Open doors to pause.

### Programs

#### Automatic programs.

The laundry is dried to selected level of dryness. Program stops automatically.



#### IRON DRY

For laundry to be ironed.



#### SLIGHTLY DRY

For laundry that will not be ironed or only lightly ironed.



#### CABINET DRY

For laundry that will not be ironed.



#### EXTRA DRY

For particularly thick fabrics.

#### Select drying time manually



#### TIMED DRYING

Set the drying time manually.



Increases the time by 5 min/push.

#### Additional functions



#### GENTLE DRYING

For delicate textiles. The temperature is reduced.



Fast forward to cool down phase.