

# INSTRUCTIONS

Drying cabinet TS 63 E / TS 93 E

## User instructions



### Select program

Change program with P-button.



### Start /cancel program

Push start /stop button. Open doors to pause.

## Programs

### Automatic programs.

The laundry is dried to selected level of dryness. Program stops automatically.



#### IRON DRY

For laundry to be ironed



#### SLIGHTLY DRY

For laundry that will not be ironed or only lightly ironed.



#### CABINET DRY

For laundry that will not be ironed.



#### EXTRA DRY

For particularly thick fabrics

### Select drying time manually



#### TIMED DRYING

Set the drying time manually.



Increases the time by 5 min/push.

### Additional functions



#### GENTLE DRYING

For delicate textiles. The temperature is reduced.



Fast forward to cool down phase.



[www.podab.us](http://www.podab.us)